


HOME DECORATORS C O L L E C T I O N

BF-25325 FREMONT HAMPER 33"Hx24.5"Wx16"D

INV#29441

ASSEMBLY INSTRUCTIONS


Made In China

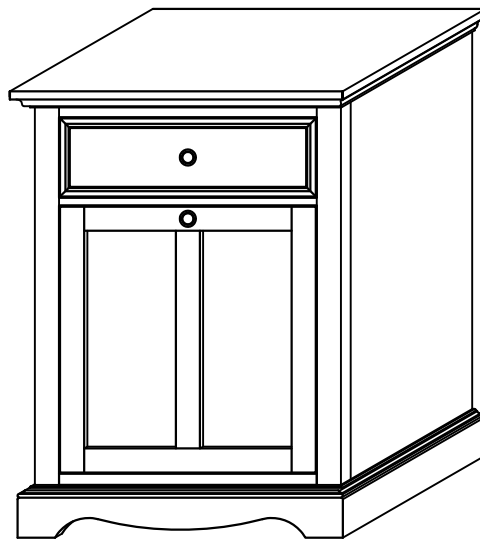

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Count all parts and material hardware, then compare with parts list to be sure all parts are present. If any parts are missing or damaged, phone, fax, or mail to our Customer Service Department for efficient and speedy service. Please indicate the model number and code letter of part(s) needed.

IMPORTANT NOTE: Follow instructions listed below in proper sequence as numbered to assure fast, easy and correct assembly.

STRUCTURAL DIAGRAM

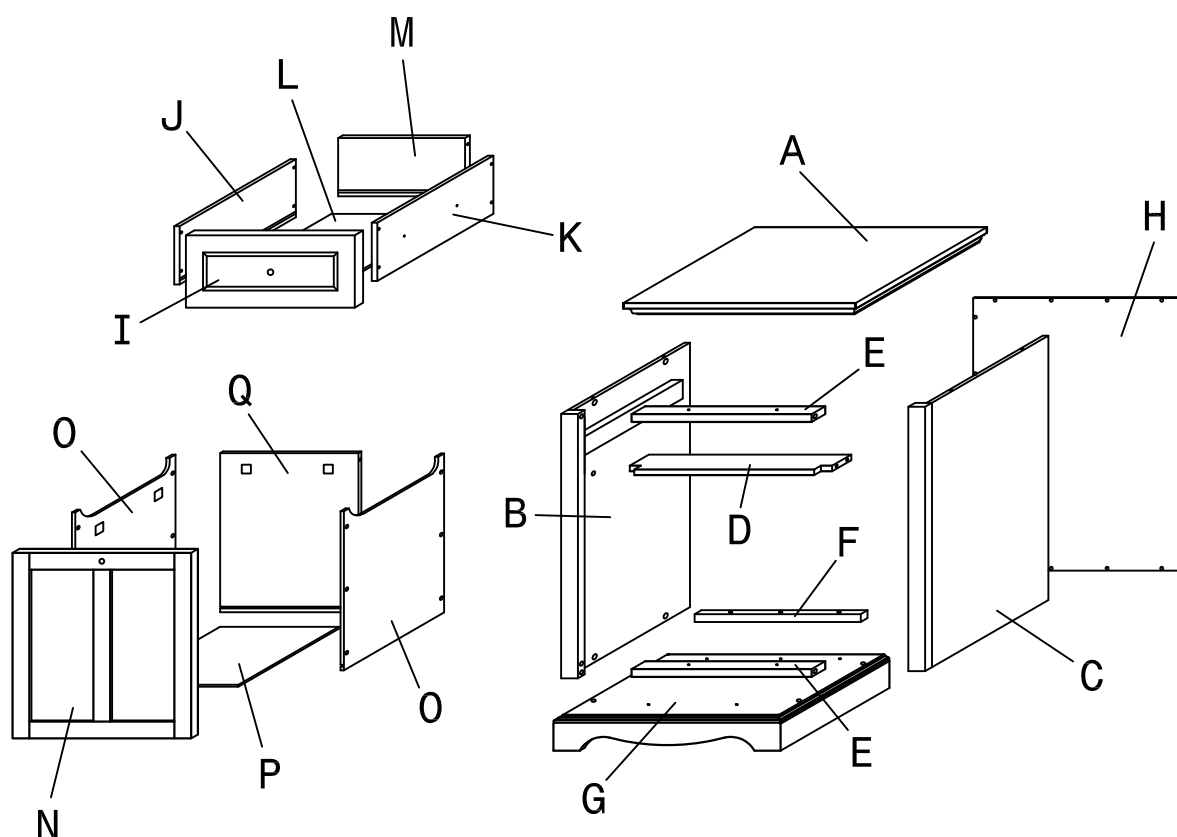


PARTS LIST

A




TOP PANEL-1PC

B




LEFT SIDE PANEL-1PC

C




RIGHT SIDE PANEL-1PC

D




ACROSS PANEL-1PC

E




ADORNING PANELS-2PCS

F




PANEL-1PC

G




BOTTOM PANEL-1PC

H

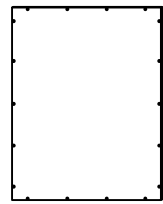


BACK PANEL-1PC

I




DRAWER
PANEL FRONT-1PC

J

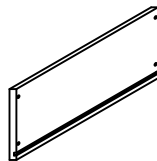


LEFT DRAWER
PANEL SIDE-1PC

K

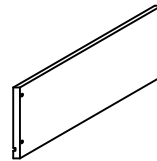

RIGHT DRAWER
PANEL SIDE-1PC

L




DRAWER
PANEL BOTTOM-1PC

M




DRAWER
PANEL BACK-1PC

N

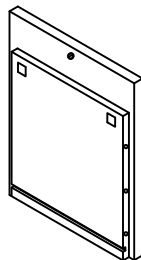


(BUCKET)
FRONT PANEL-1PC

O




(BUCKET)
SIDE PANELS-2PCS

P




(BUCKET)
BOTTOM PANEL-1PC

Q




(BUCKET)
BACK PANEL-1PC

R

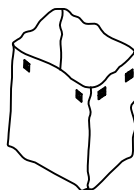

BAG-1PC

S










FEET-4PCS

T





CAM-TOOL-1PC

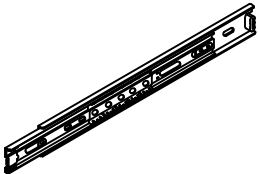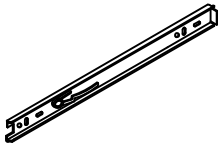U  CAM-BOLTS-14PCS	V  CAM-LOCKS-14PCS	W 8mm × 1"  SCREWS-7PCS	X 6mm × 3/4"  SCREWS-20PCS
Y 8mm × 5/8"  SCREWS-2PCS	Z  HANDLES-2PCS	A1  HINGES-2PCS	B1  OUTER SLIDERS-2PCS
C1  INNER SLIDES-2PCS	D1 6mm × 1/2"  SCREWS-10PCS	E1 7mm × 5/8"  SCREWS-18PCS	F1  DOWELS-2PCS




NOTE: THE SURFACE WITH THE STICKER IS THE BACK SIDE.

NOTE: • UPON OPENING, THOROUGHLY CLEAN ALL WOOD SURFACES TO REMOVE DUST AND DIRT THAT MAY HAVE SETTLED ONTO FINISH DURING SHIPMENT. IN ORDER TO PREVENT DAMAGE DURING ASSEMBLY, PLEASE ASSEMBLE THIS ITEM WITH AT LEAST TWO PEOPLE.

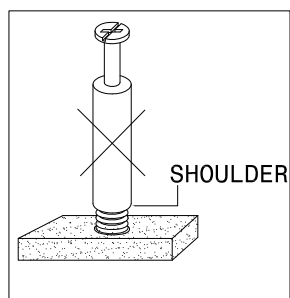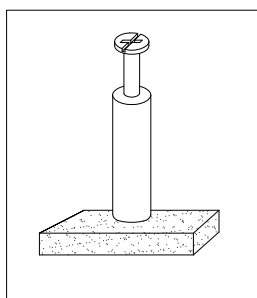


NOTE: TURN THE CAM-BOLT SCREWS UNTIL THEY ARE TIGHT, THE SHOULDER SHOULD BE AGAINST THE SURFACE OF THE PART.

HOW TO USE THE CAM-TOOL

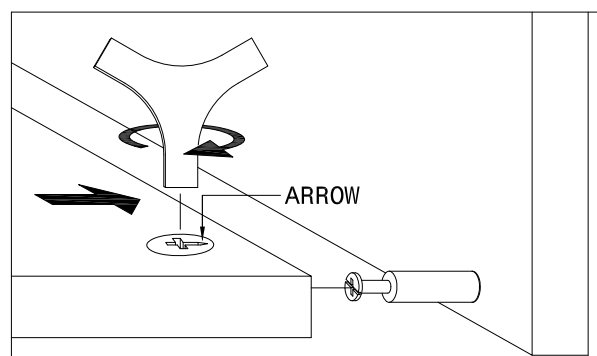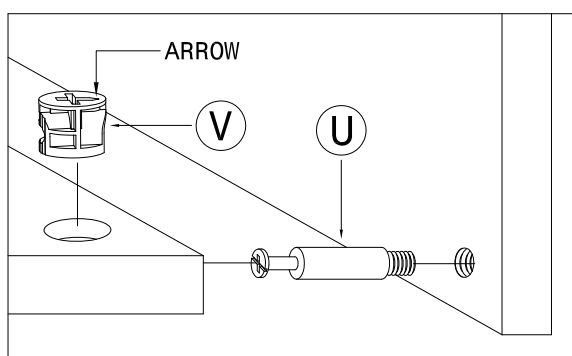


NOTE: • THE ARROWS ON THE HIDDEN CAM-LOCKS SHOULD POINT TO THE CAM-BOLTS

HOW TO SEPARATE GLIDES

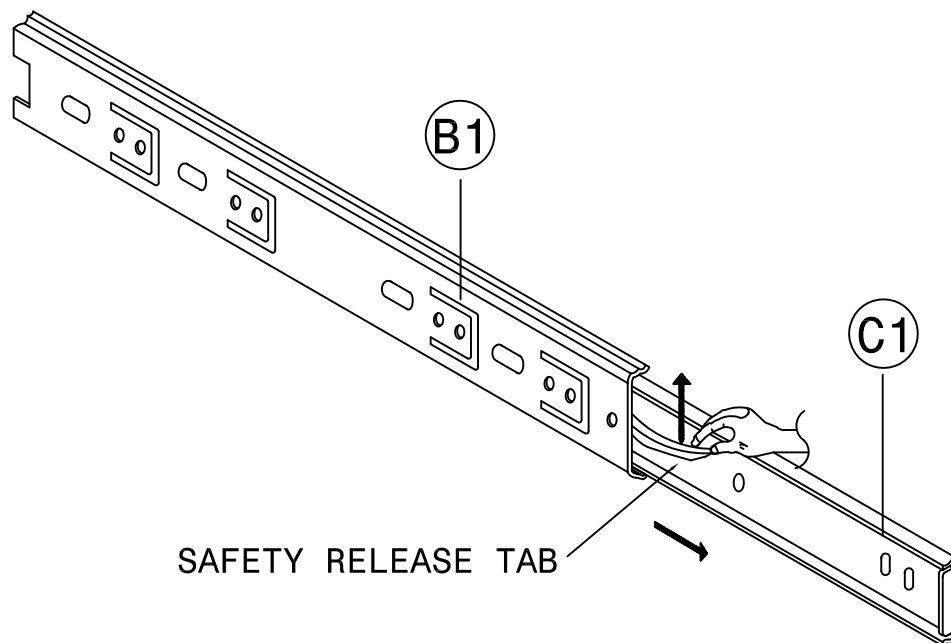


PRIOR TO ASSEMBLY, WE SUGGEST SEPARATING THE INNER GLIDES FROM THE OUTER-GLIDES, SIMPLY PULL THE LEFT/RIGHT INNER GLIDES FROM THE OUTER GLIDES EXPOSING A SMALL BLACK SAFETY RELEASE TAB, BY PUSHING THE SAFETY RELEASE TAB. YOU WILL BE ABLE TO SEPARATE THE GLIDES.

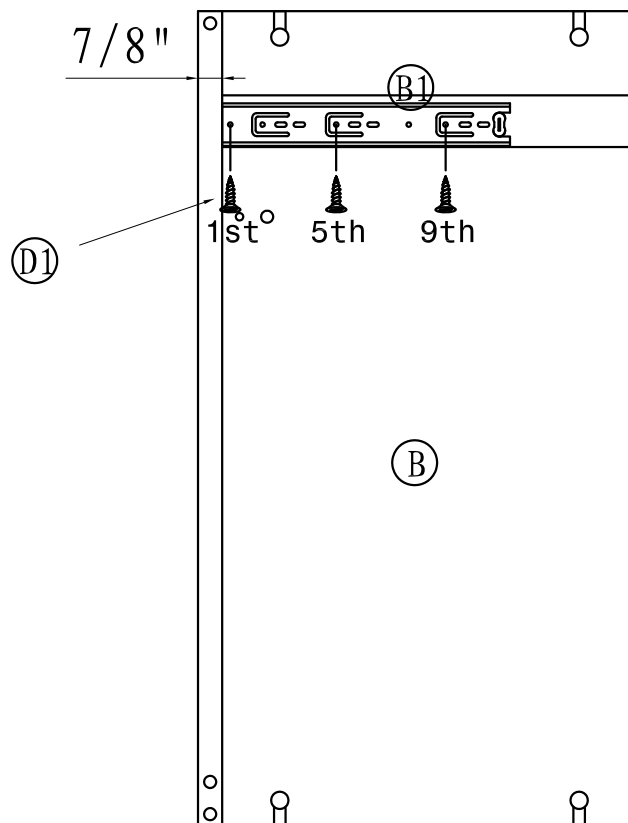


1) . ASSEMBLE THE OUTER SLIDERS(B1) .

- ATTACH THE OUTER SLIDERS(B1) TO LEFT SIDE PANEL(B) USING 3 SCREWS(D1) .

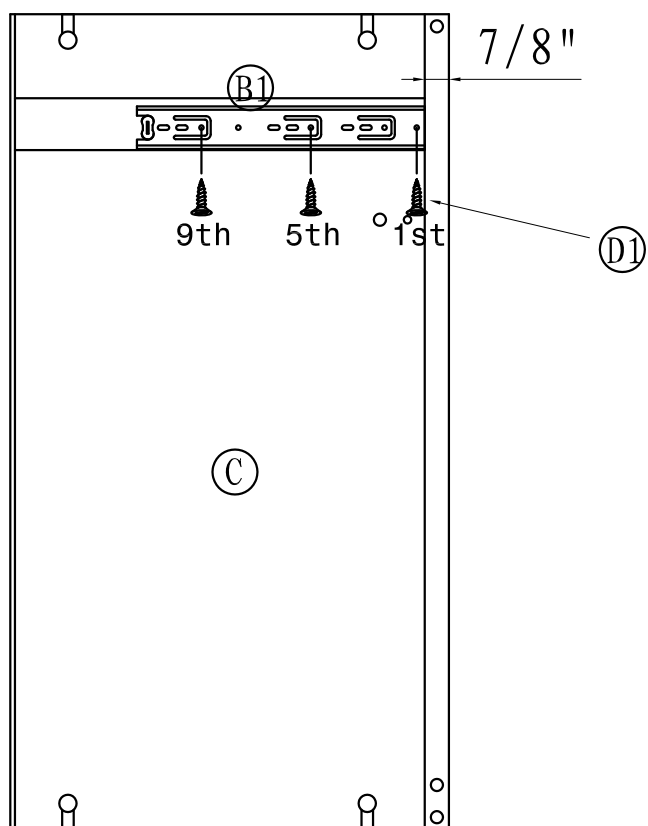


2) . ASSEMBLE THE OUTER SLIDERS(B1) .

- ATTACH THE OUTER SLIDERS(B1) TO RIGHT SIDE PANEL(C) USING 3 SCREWS(D1) .

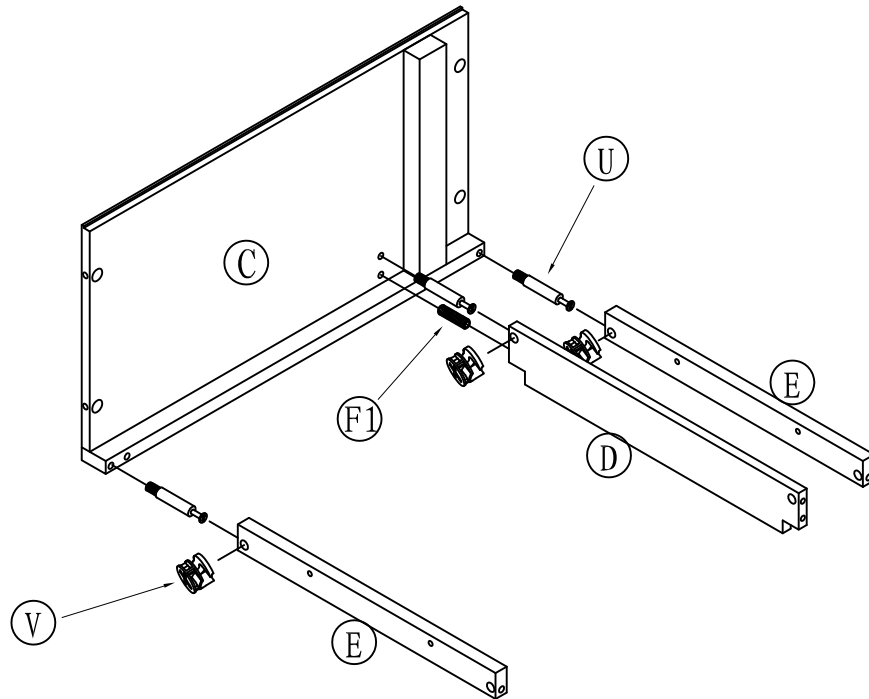


3) . ASSEMBLE THE RIGHT SIDE PANEL(C) .

- ROTATE 3 CAM-BOLTS(U) AND INSERT 1 DOWEL(F1) INTO THE HOLES IN THE RIGHT SIDE PANEL(C) .
- PLACE THE CAM-BOLTS(U) INTO THE HOLES IN THE PANEL(D/E) AND ATTACH USING 3 CAM-LOCKS(V) .

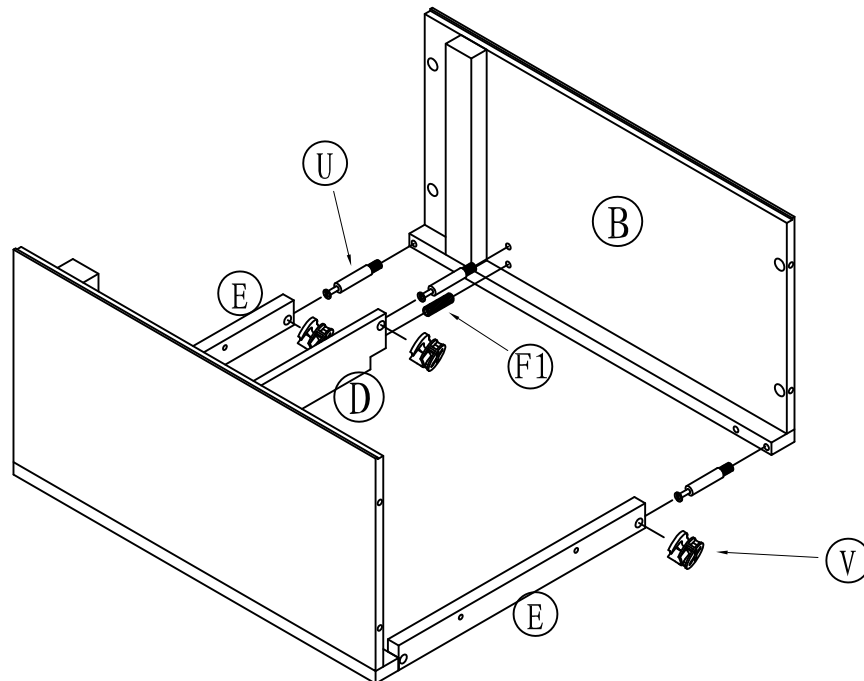


4) . ASSEMBLE THE LEFT SIDE PANEL(B) .

- ROTATE 3 CAM-BOLTS(U) AND INSERT 1 DOWEL(F1) INTO THE HOLES IN THE LEFT SIDE PANEL(B) .
- PLACE THE CAM-BOLTS(U) INTO THE HOLES IN THE PANEL(D/E) AND ATTACH USING 3 CAM-LOCKS(V) .

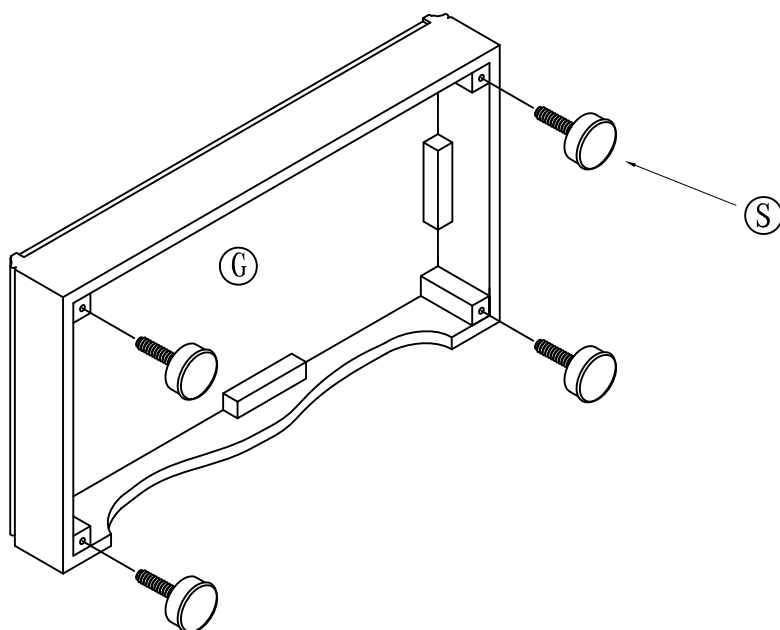


5) . ASSEMBLE THE FEET(S).

- ROTATE 4 FEET(S) INTO THE HOLES IN THE BOTTOM PANEL(G) .

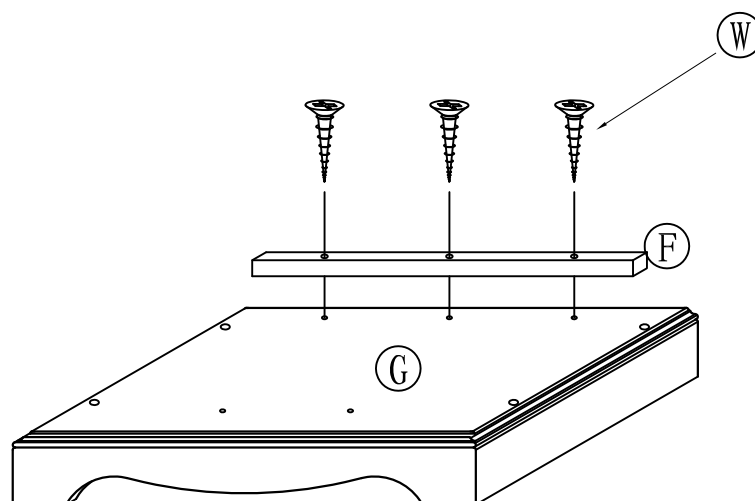


6) . ASSEMBLE THE PANEL(F).

- ATTACH THE PANEL(F) TO BOTTOM PANEL(G) USING 3 SCREWS(W) .

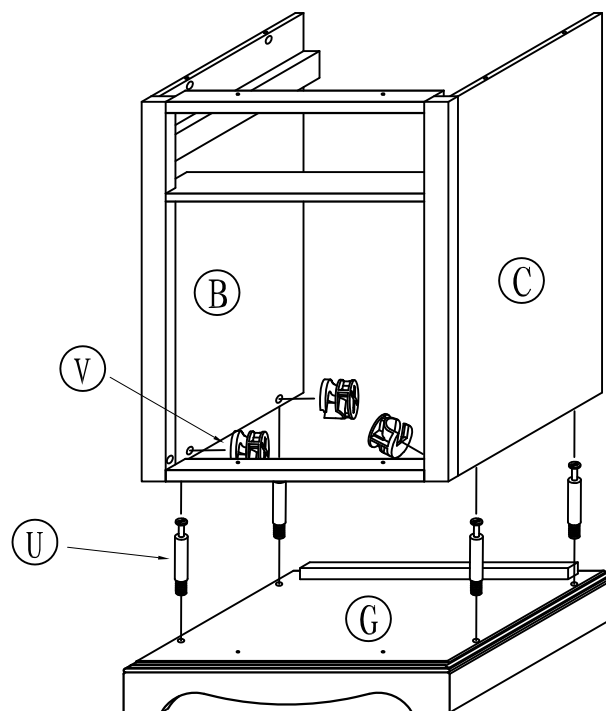


7) . ASSEMBLE THE BOTTOM PANEL (G) .

- ROTATE 4 CAM-BOLTS(U) INTO THE HOLES IN THE BOTTOM PANEL (G) .
- PLACE THE CAM-BOLTS(U) INTO THE HOLES IN THE PANEL (B/C) AND ATTACH USING 4 CAM-LOCKS (V) .

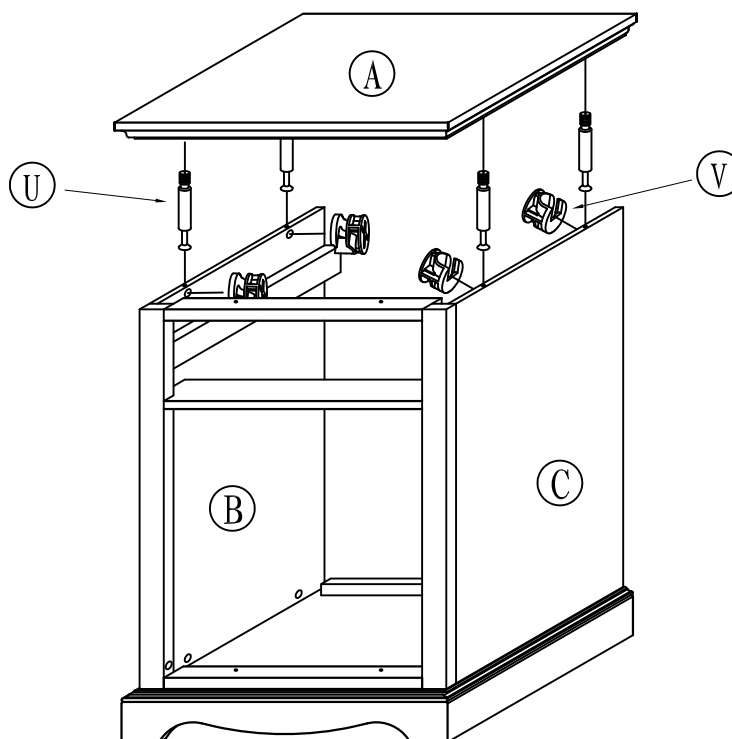


8) . ASSEMBLE THE TOP PANEL (A) .

- ROTATE 4 CAM-BOLTS(U) INTO THE HOLES IN THE TOP PANEL (A) .
- PLACE THE CAM-BOLTS(U) INTO THE HOLES IN THE PANEL (B/C) AND ATTACH USING 4 CAM-LOCKS (V) .

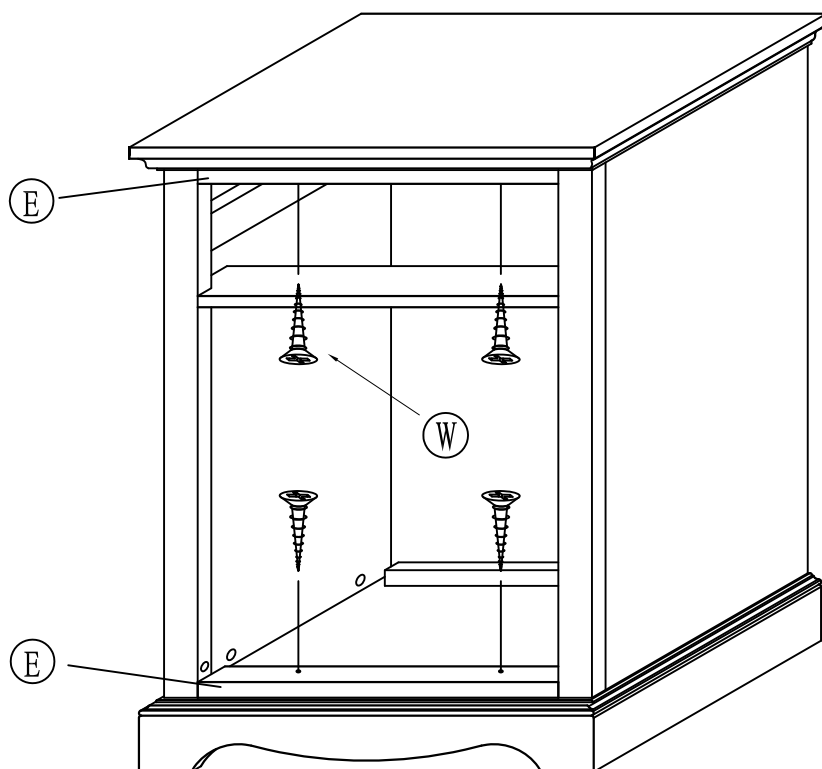


9) . ASSEMBLE THE ADORNING PANEL(E) .

- ROTATE 4 SCREWS(W) INTO THE HOLES IN THE ADORNING PANEL(E) .

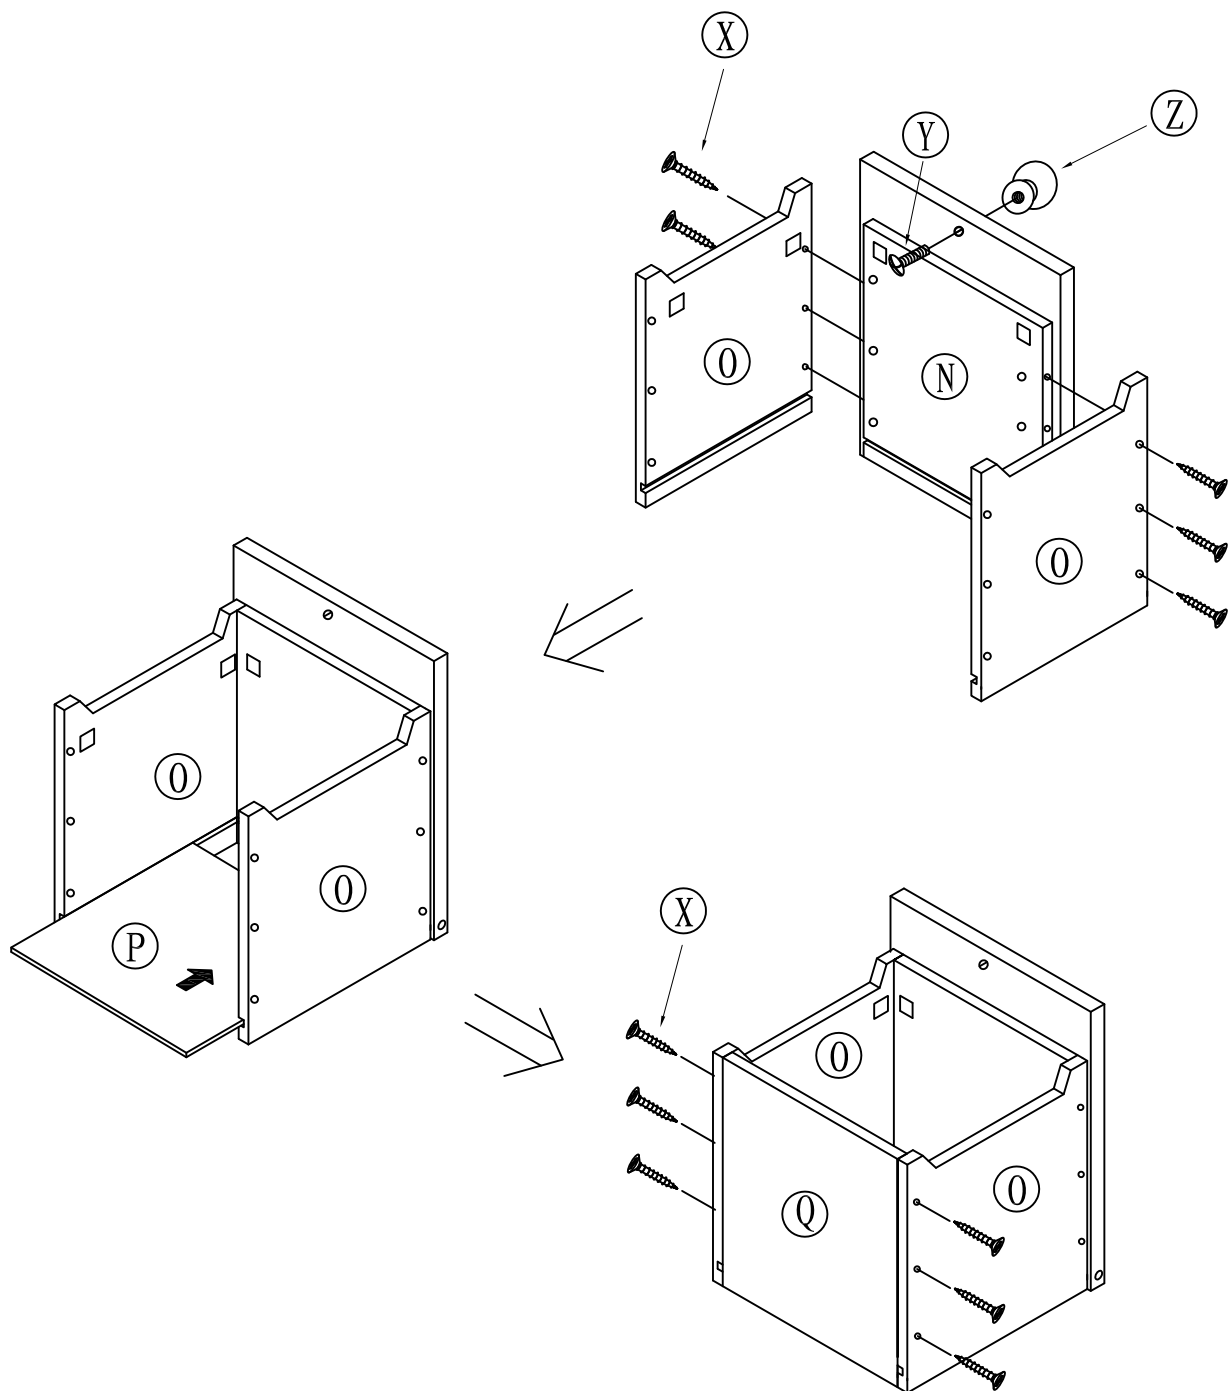


10) . DIRTY CLOTHING BUCKET.

- ATTACH THE HANDLE(Z) TO FRONT PANEL(N) USING 1 SCREW(Y).
- ATTACH THE SIDE PANELS(O) TO FRONT PANEL(N) USING 6 SCREWS(X).
- INSERT BOTTOM PANEL(P) INTO THE SLOT IN THE SIDE PANELS(O).
- ATTACH THE BACK PANEL(Q) BETWEEN SIDE PANELS(O) USING 6 SCREWS(X).

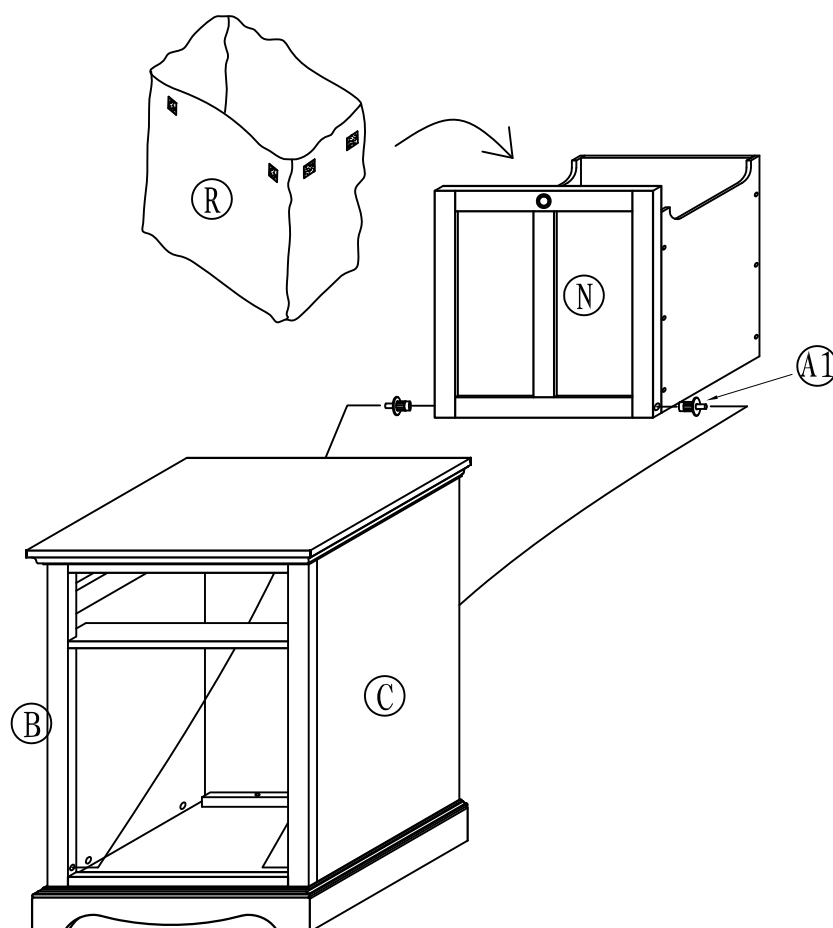


11) . ASSEMBLE THE DIRTY CLOTHING BUCKET.

- PUT THE BAG(R) INTO THE BUCKET.
- INSERT 2 HINGES(A1) INTO THE HOLES IN THE FRONT PANEL(N).
- INSERT 2 HINGES(A1) INTO THE HOLES IN THE SIDE PANEL(B/C).

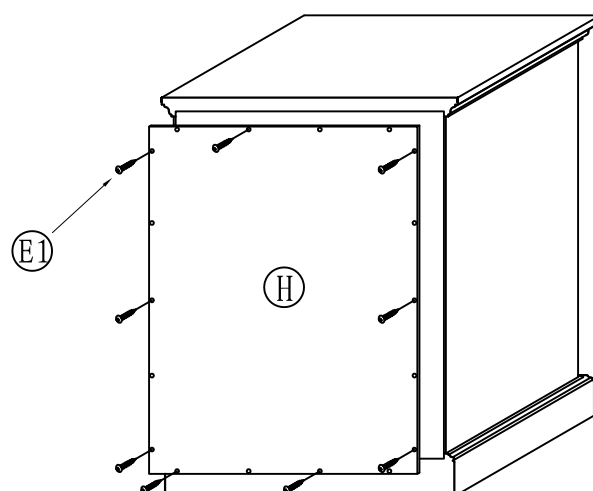

12) . ASSEMBLE THE BACK PANEL(H).


- ATTACH THE BACK PANEL(H) USING 18 SCREWS(E1).

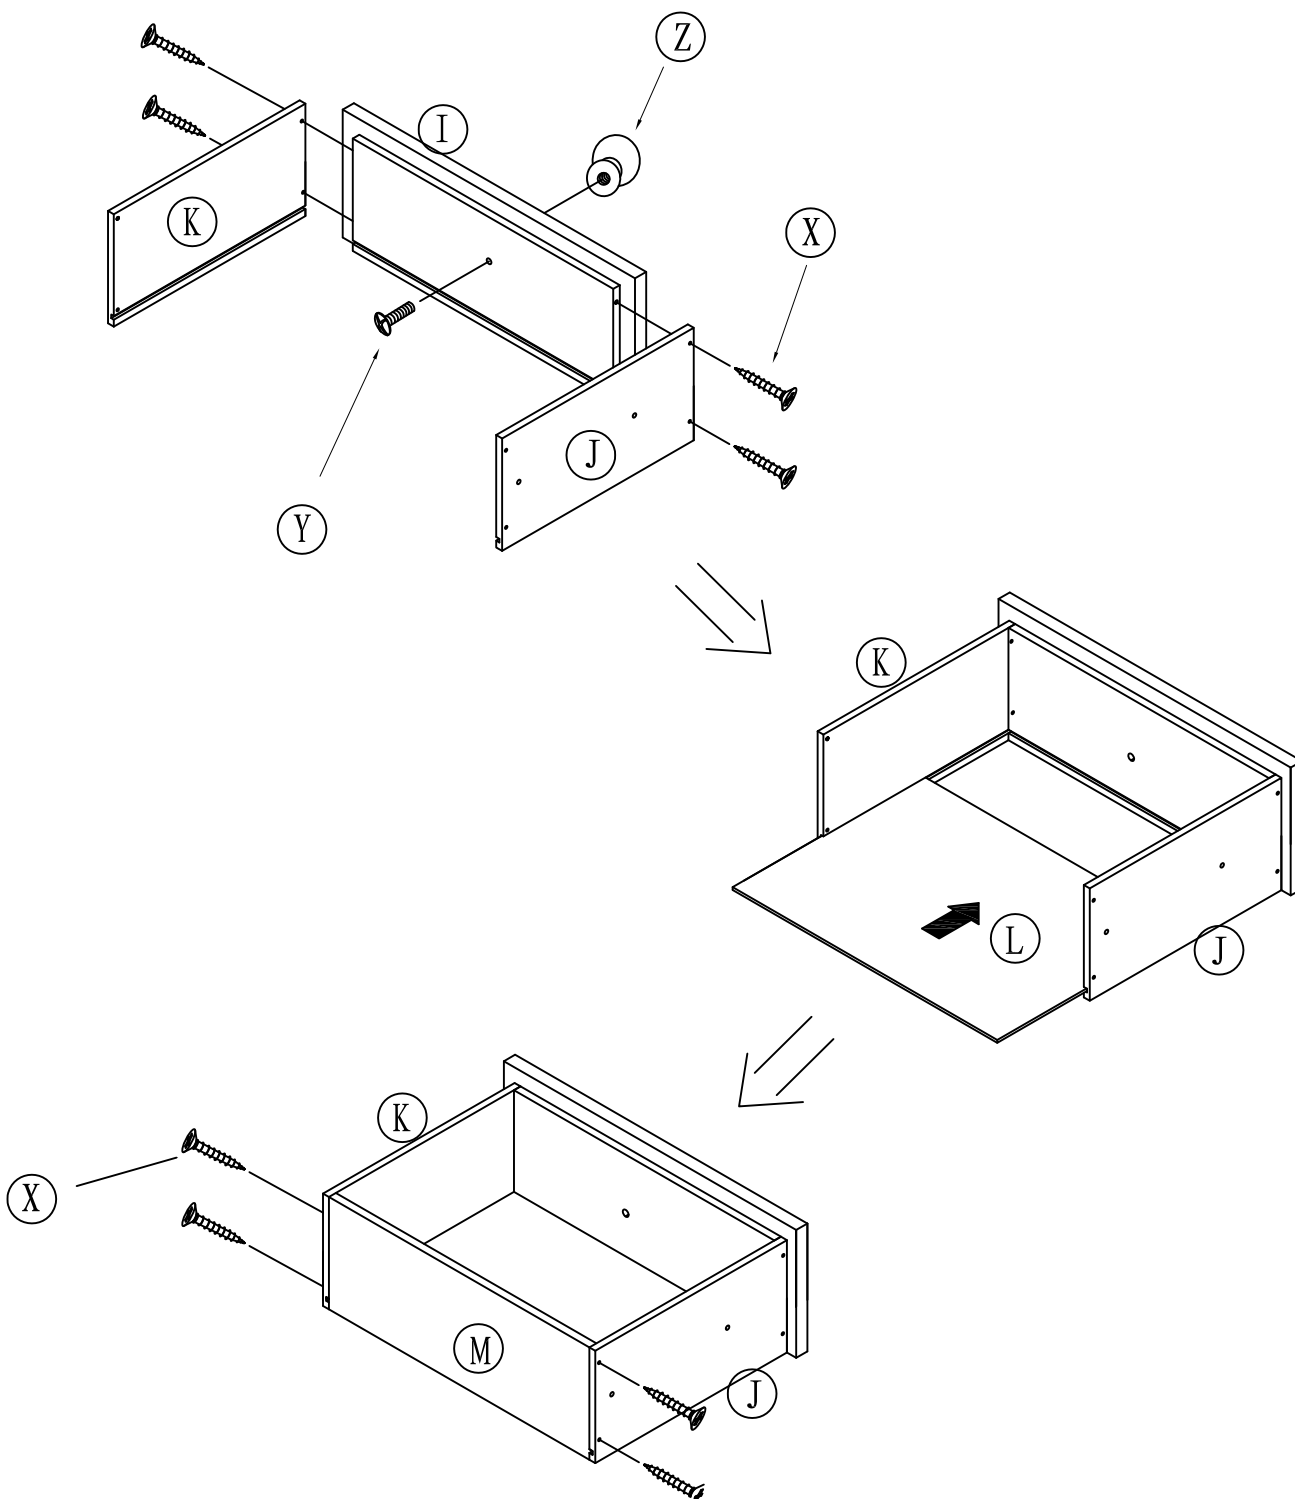

13) . ASSEMBLE THE DRAWER.

- ATTACH THE DRAWER PANEL SIDE(J/K) TO DRAWER PANEL FRONT(I) USING 4 SCREWS(X) .
- ATTACH THE HANDLE(Z) TO DRAWER PANEL FRONT(I) USING 1 SCREW(Y) .
- INSERT DRAWER PANEL BOTTOM(L) INTO THE SLOT IN THE DRAWER PANEL SIDE(J/K) .
- ATTACH THE DRAWER PANEL BACK(M) BETWEEN LEFT DRAWER PANEL SIDE(J) AND RIGHT DRAWER PANEL SIDE(K) USING 4 SCREWS(X) .


ARROW FACES DRAWER FRONT

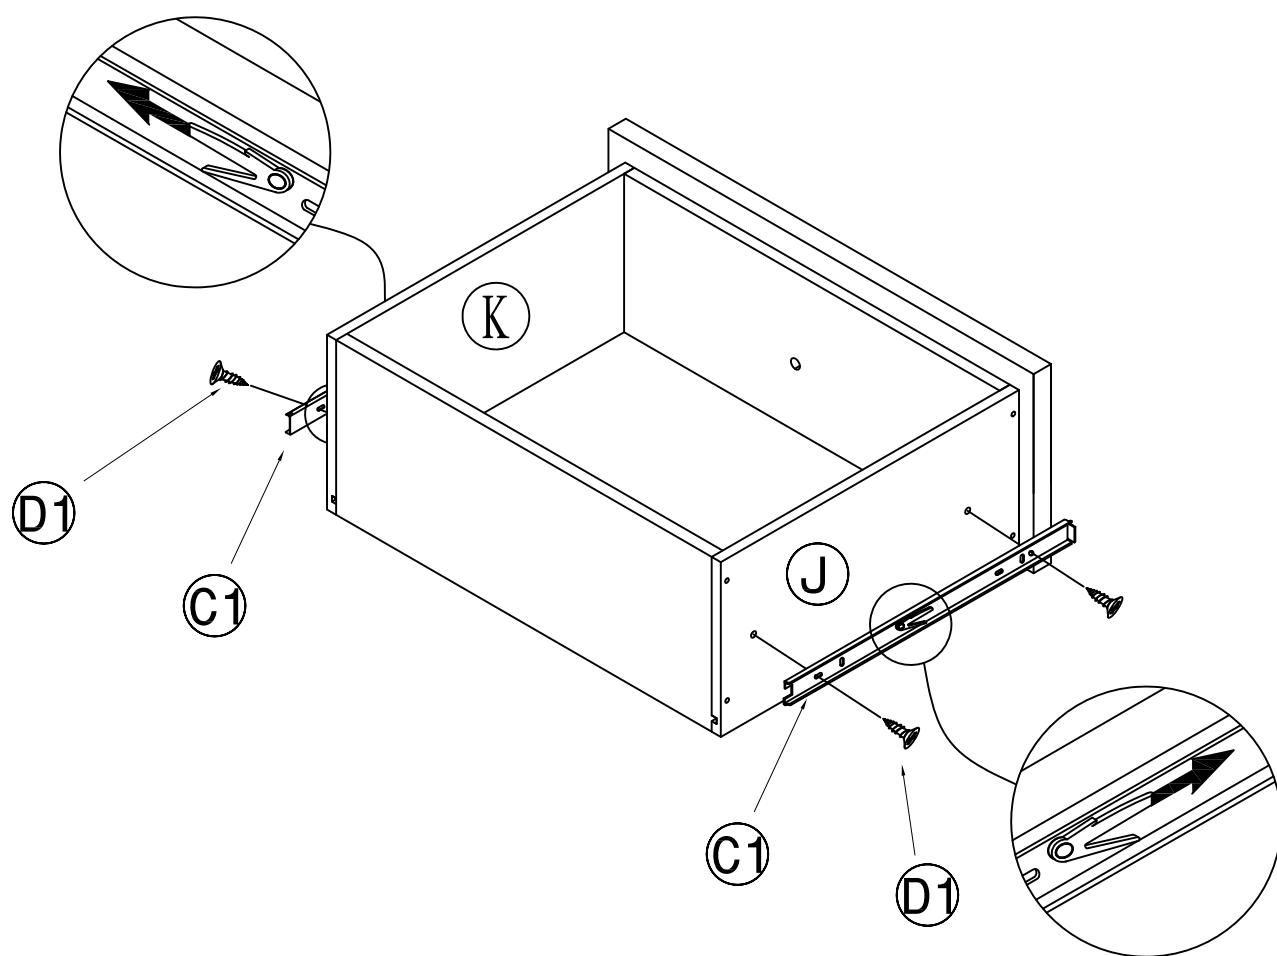

ARROW FACES DRAWER FRONT

14) . ASSEMBLE THE INNER SLIDES(C1) .

- ATTACH THE INNER SLIDES(C1) TO DRAWER PANEL SIDE(J/K) USING 4 SCREWS(D1) .

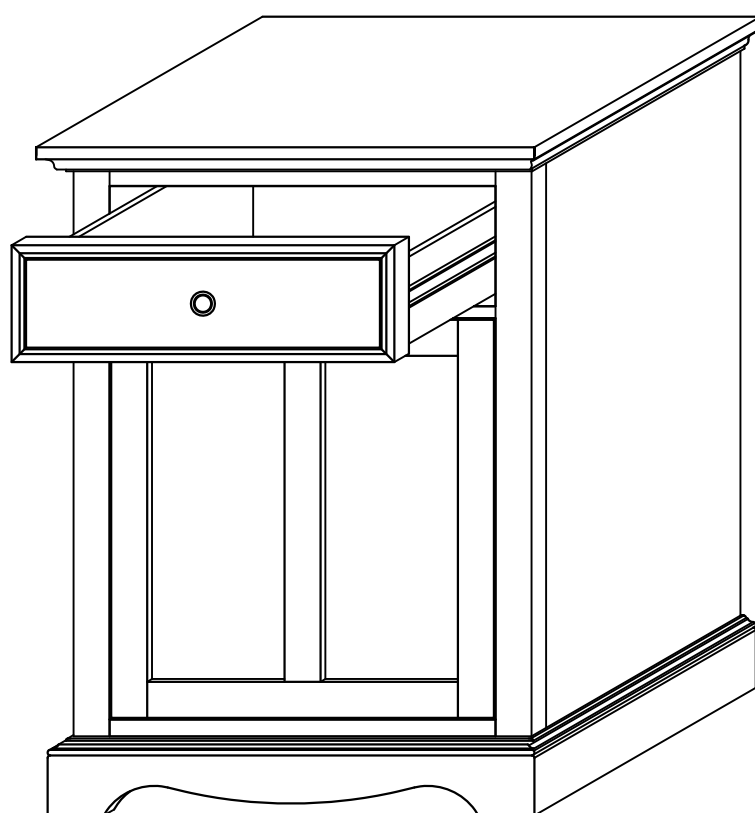

15) . ASSEMBLE THE DRAWER.

- INSERT THE DRAWER INTO THE SLIDERS.